


Wire length: 15cm  
 Crimp the corresponding contact on both ends of the wires.  
 Place the wires in the corresponding location of the connectors.  
 Place all wires in the ferrite core and close it.

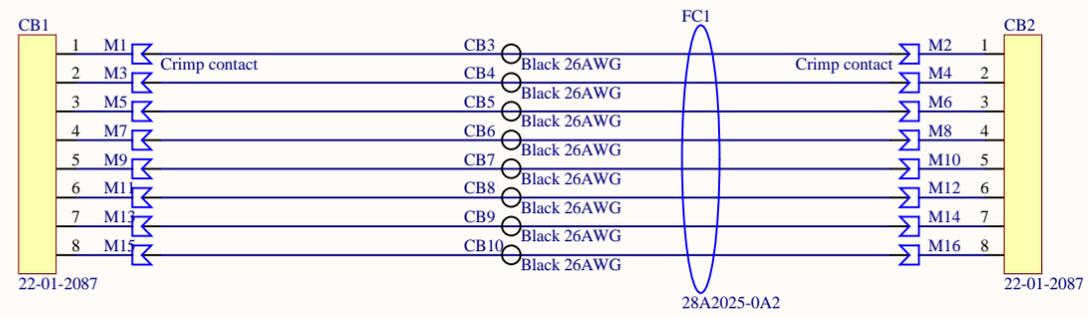

	<b>Title:</b> <b>Keypad Cable Assembly</b>	
	<b>Drawn:</b> TLa	<b>Number:</b> 1.
<b>Checked:</b> TSt	<b>Date:</b> 11-12-2017	<b>Sheet:</b> 1 of 1
<b>File:</b> MLA-0387-C0.SchDoc		